

SIMATIC Unified Air starter kit includes: SIMATIC Unified Air und SIMATIC Reader RF1070R - - content: 6AV2151-0BR01-0AB8 and 6GT2831-6BA60; 1x reader with license

Classifications			
		Version	Classification
	eClass	16	27-24-25-02
	eClass	14	27-24-25-02
	eClass	12	27-24-25-02
	eClass	9.1	27-24-25-02
	eClass	9	27-24-25-02
	eClass	8	27-24-25-02
	eClass	7.1	27-24-25-02
	eClass	6	27-24-25-02
	ETIM	10	EC001416
	ETIM	9	EC001416
	ETIM	8	EC001416
	ETIM	7	EC001416

last modified:

4/14/2026 